bhoksi

# Tipper Truck

## Print it

1. Print every page at 100% / "Actual size" (no "fit to page"). 40 pages on A4.
2. Check the 50 mm square measures exactly 50 mm.
3. Tape the pages together using the corner marks (page order is printed on each page).

## Build it

1. Fold the chassis and glue the axle liner inside it. Push straw bushings into the six axle holes, slide the three axles through and press the wheels on.
2. Fold the subframe and cab mount and glue them on top of the chassis. Glue the two chassis hinge lugs at the very back, with a straw through each hole.
3. Fold the bin: walls up, tabs onto the headboard, then the canopy forward and the top hems down inside. Glue the two bin lugs under its floor at the back.
4. Lay the bin on the chassis, push the hinge dowel through all four lugs and glue the tip lever onto the near end. Hook the rubber band from the bin to the cab mount.
5. Fold the tailgate, slide the tailgate bar through the bin's top holes and the tailgate, and check it swings free.
6. Fold the cab: sides up, wrap the grille, windscreen and roof round and glue the tabs, then glue it onto the cab mount.

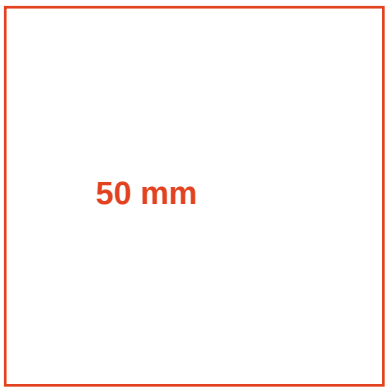

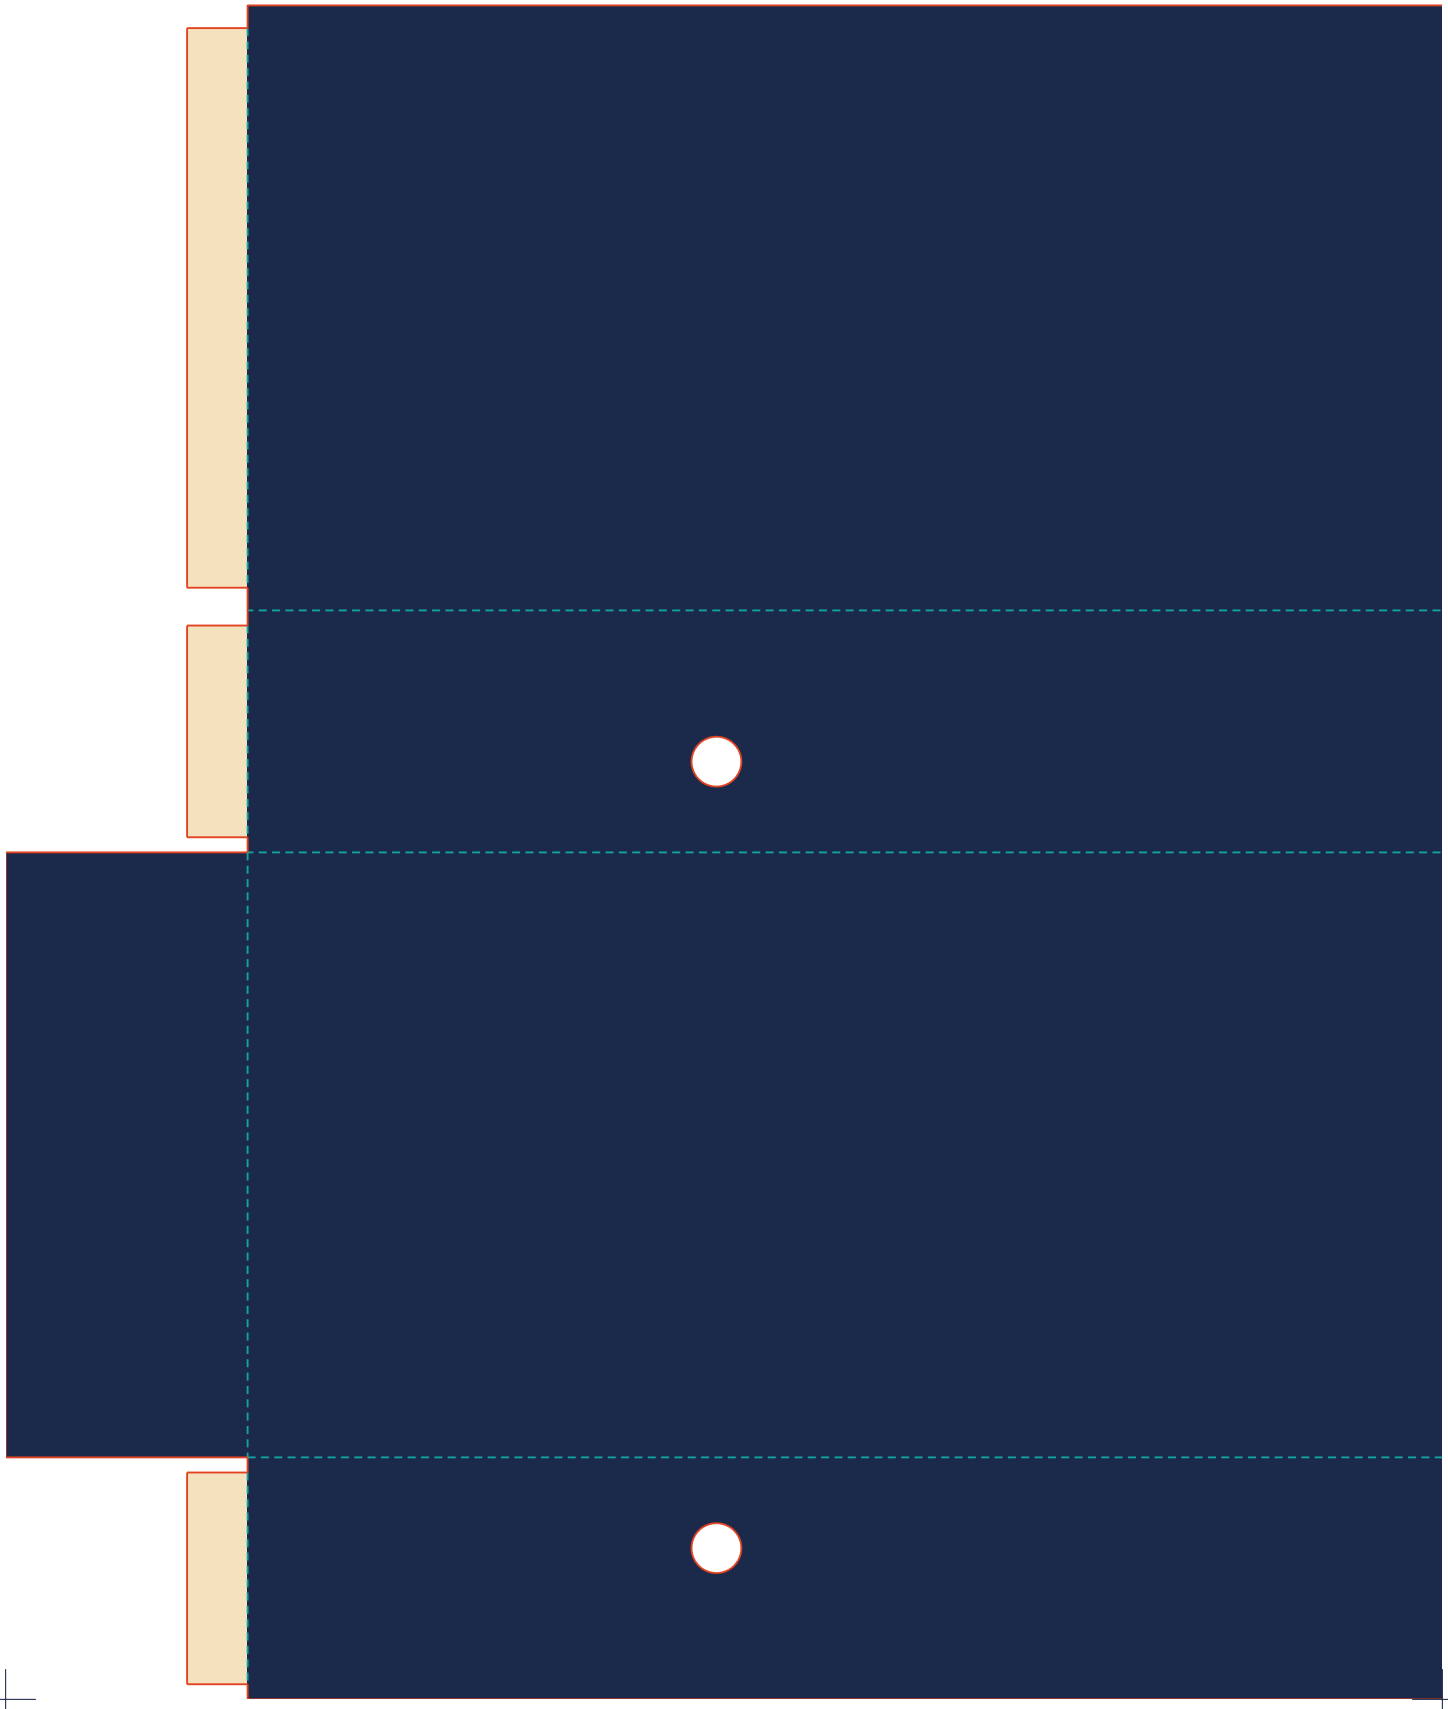

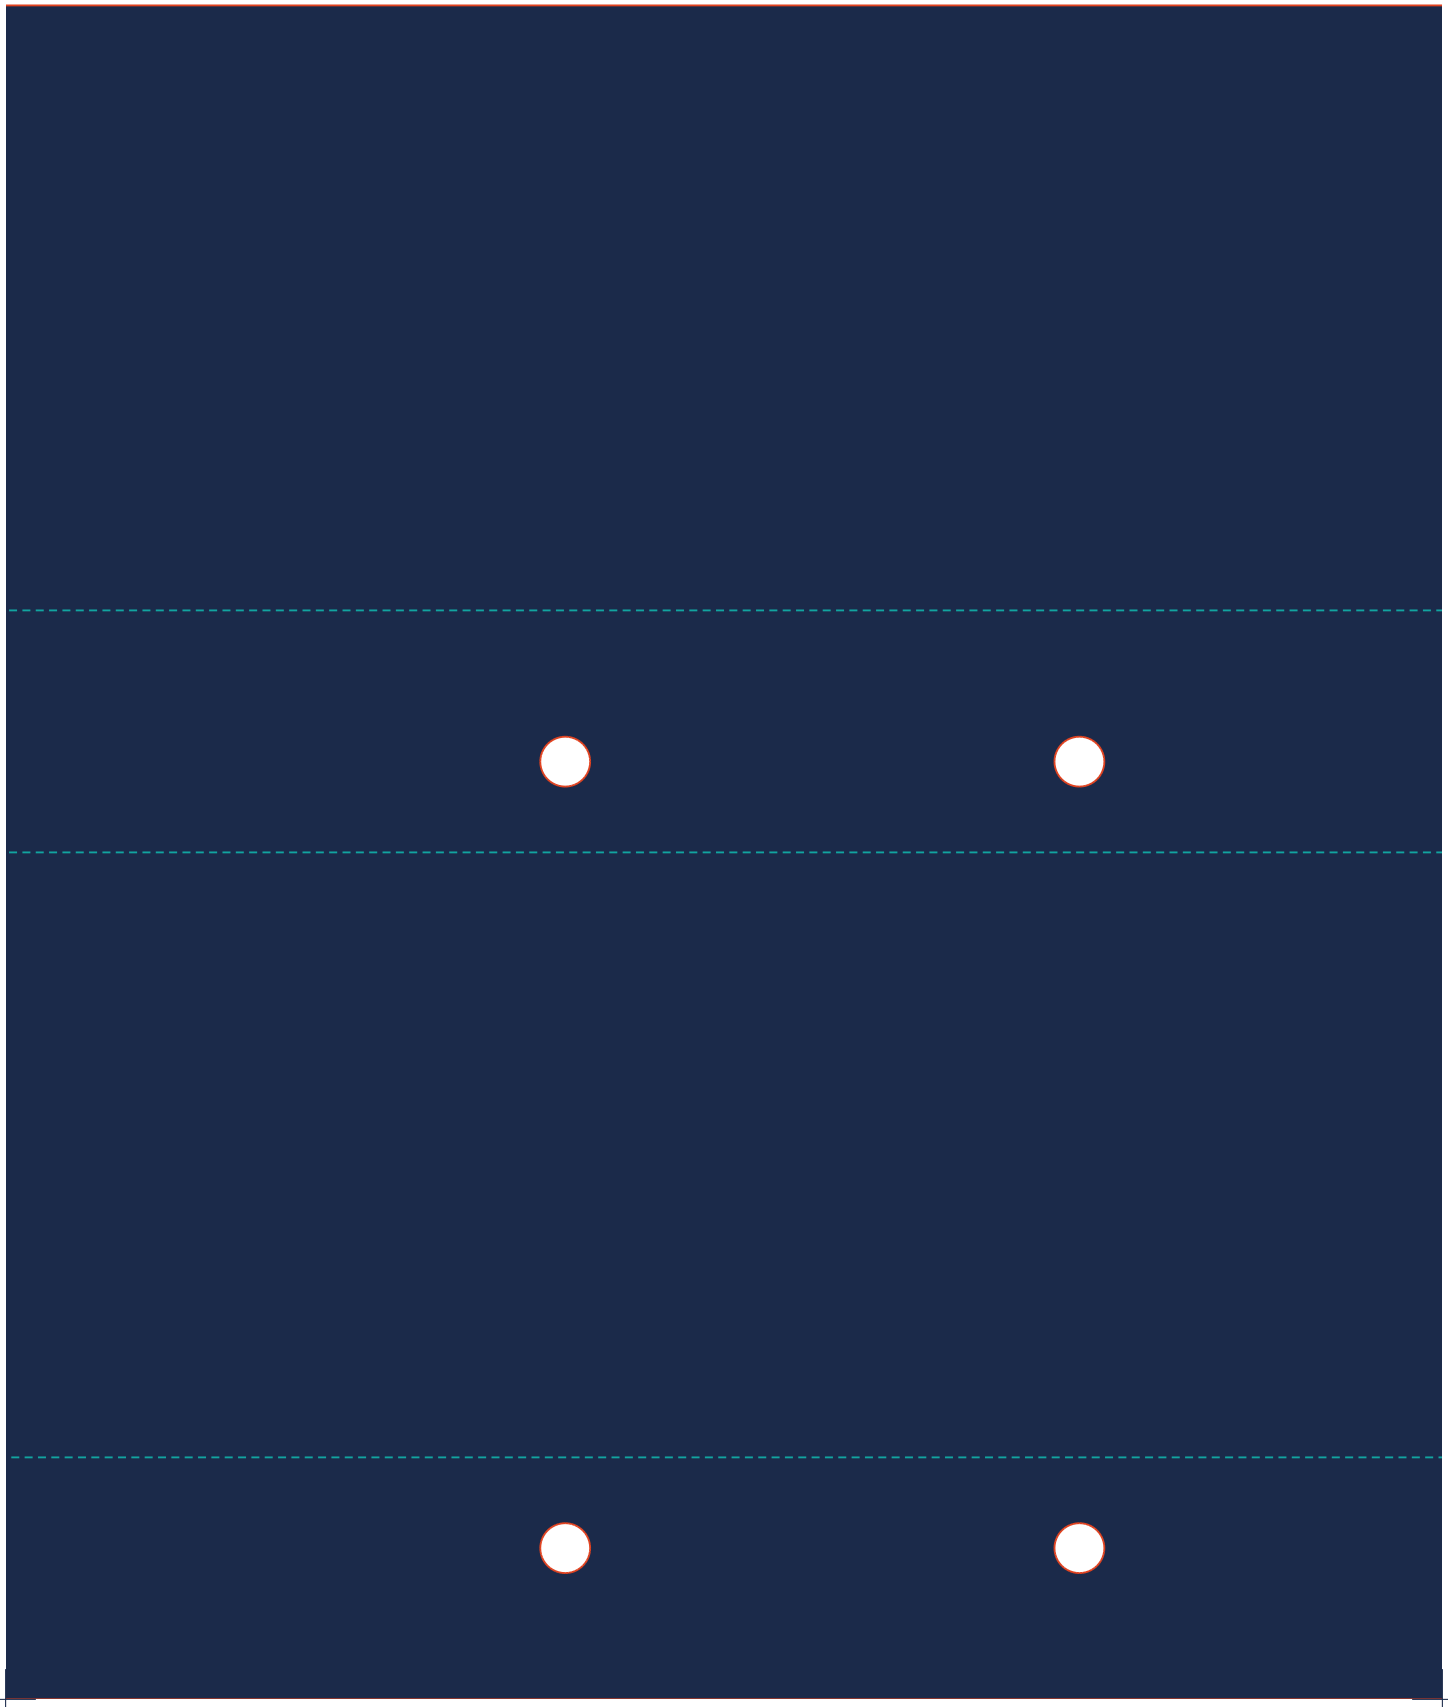

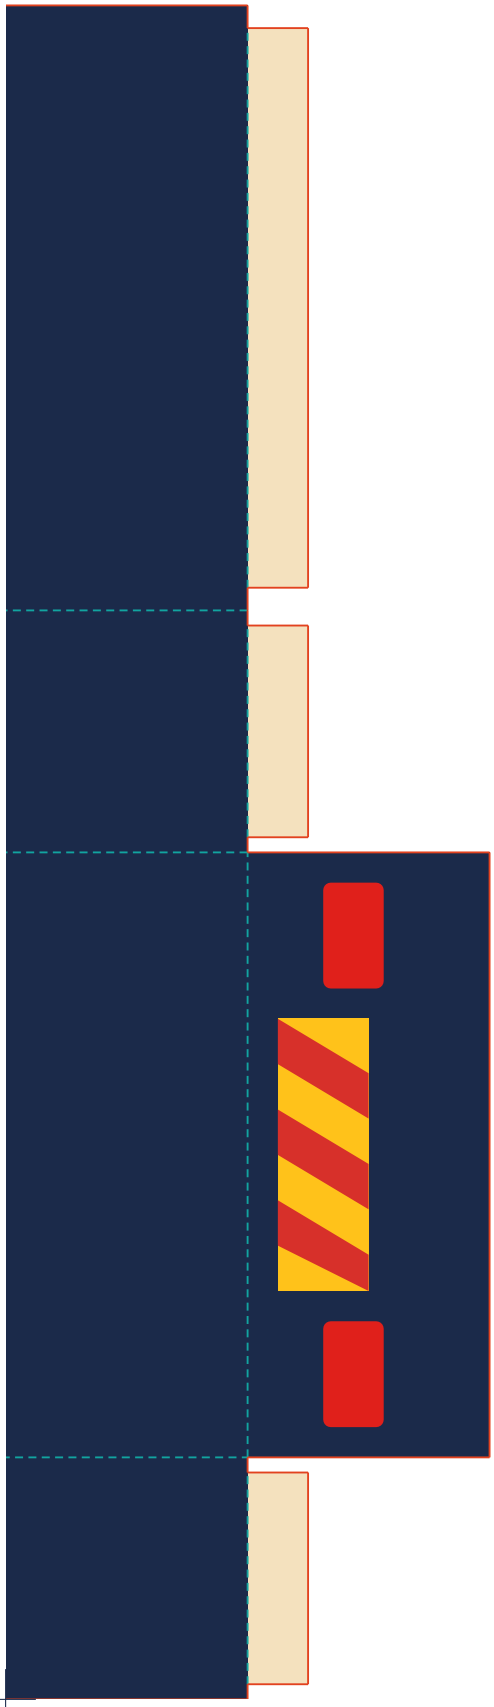

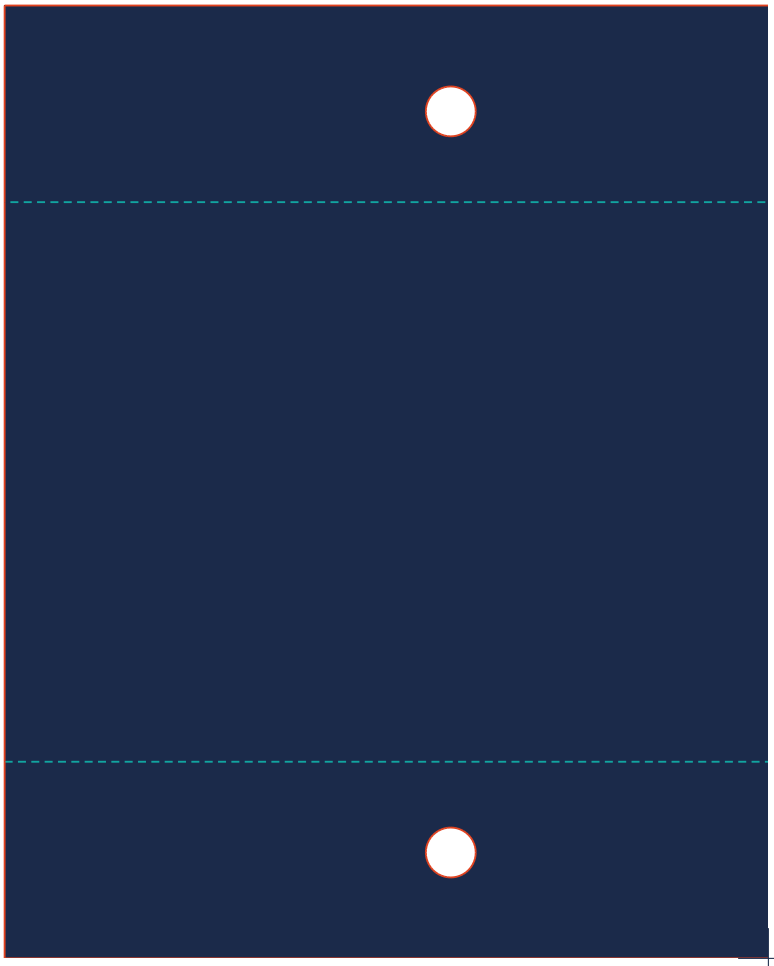

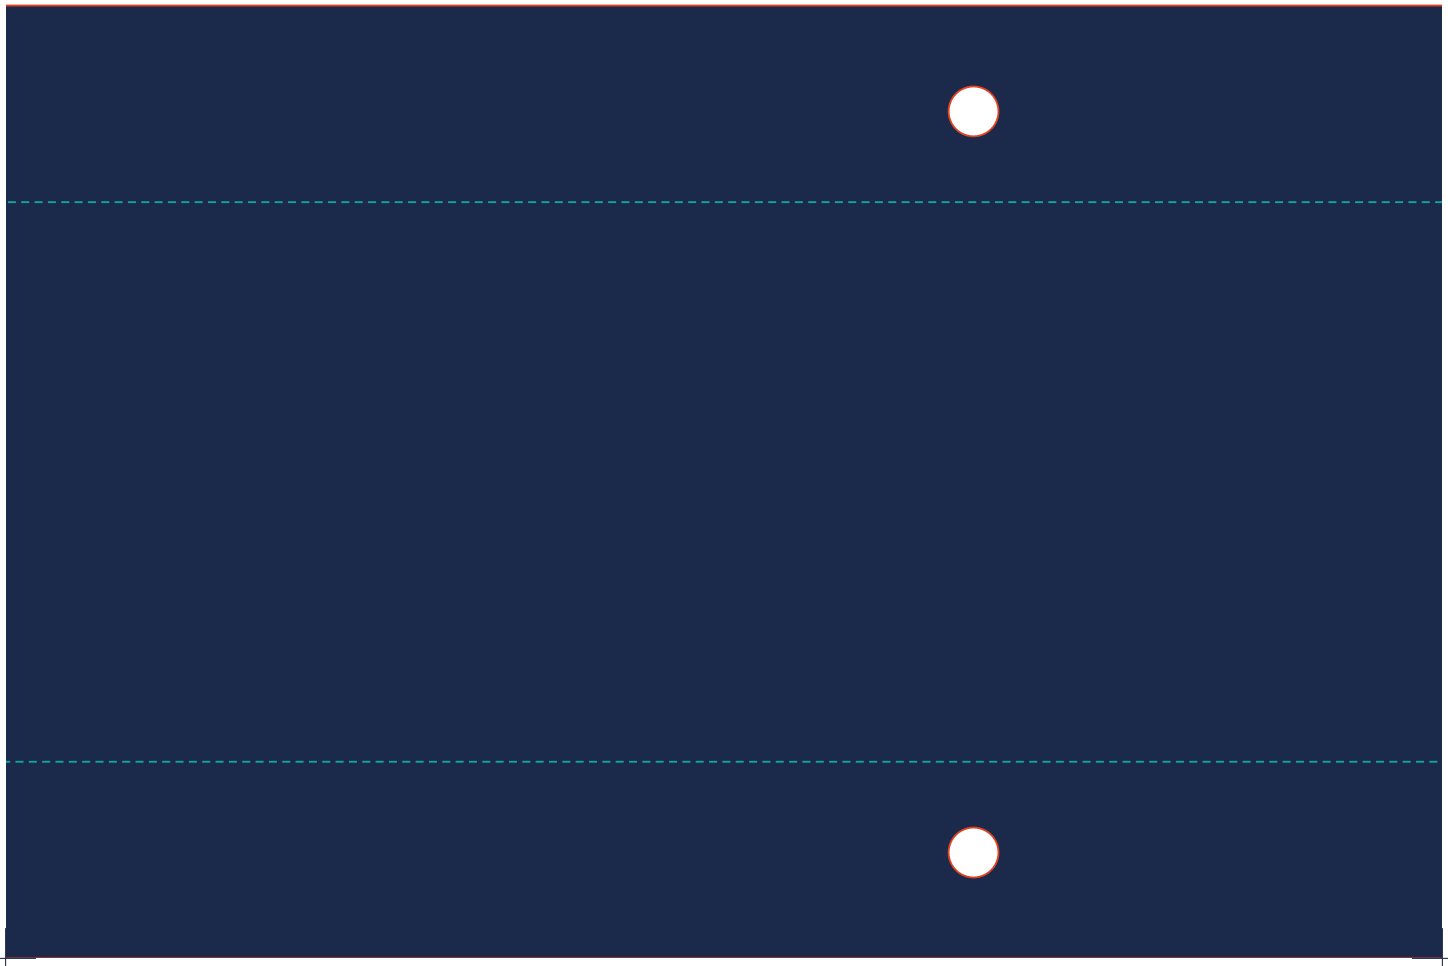

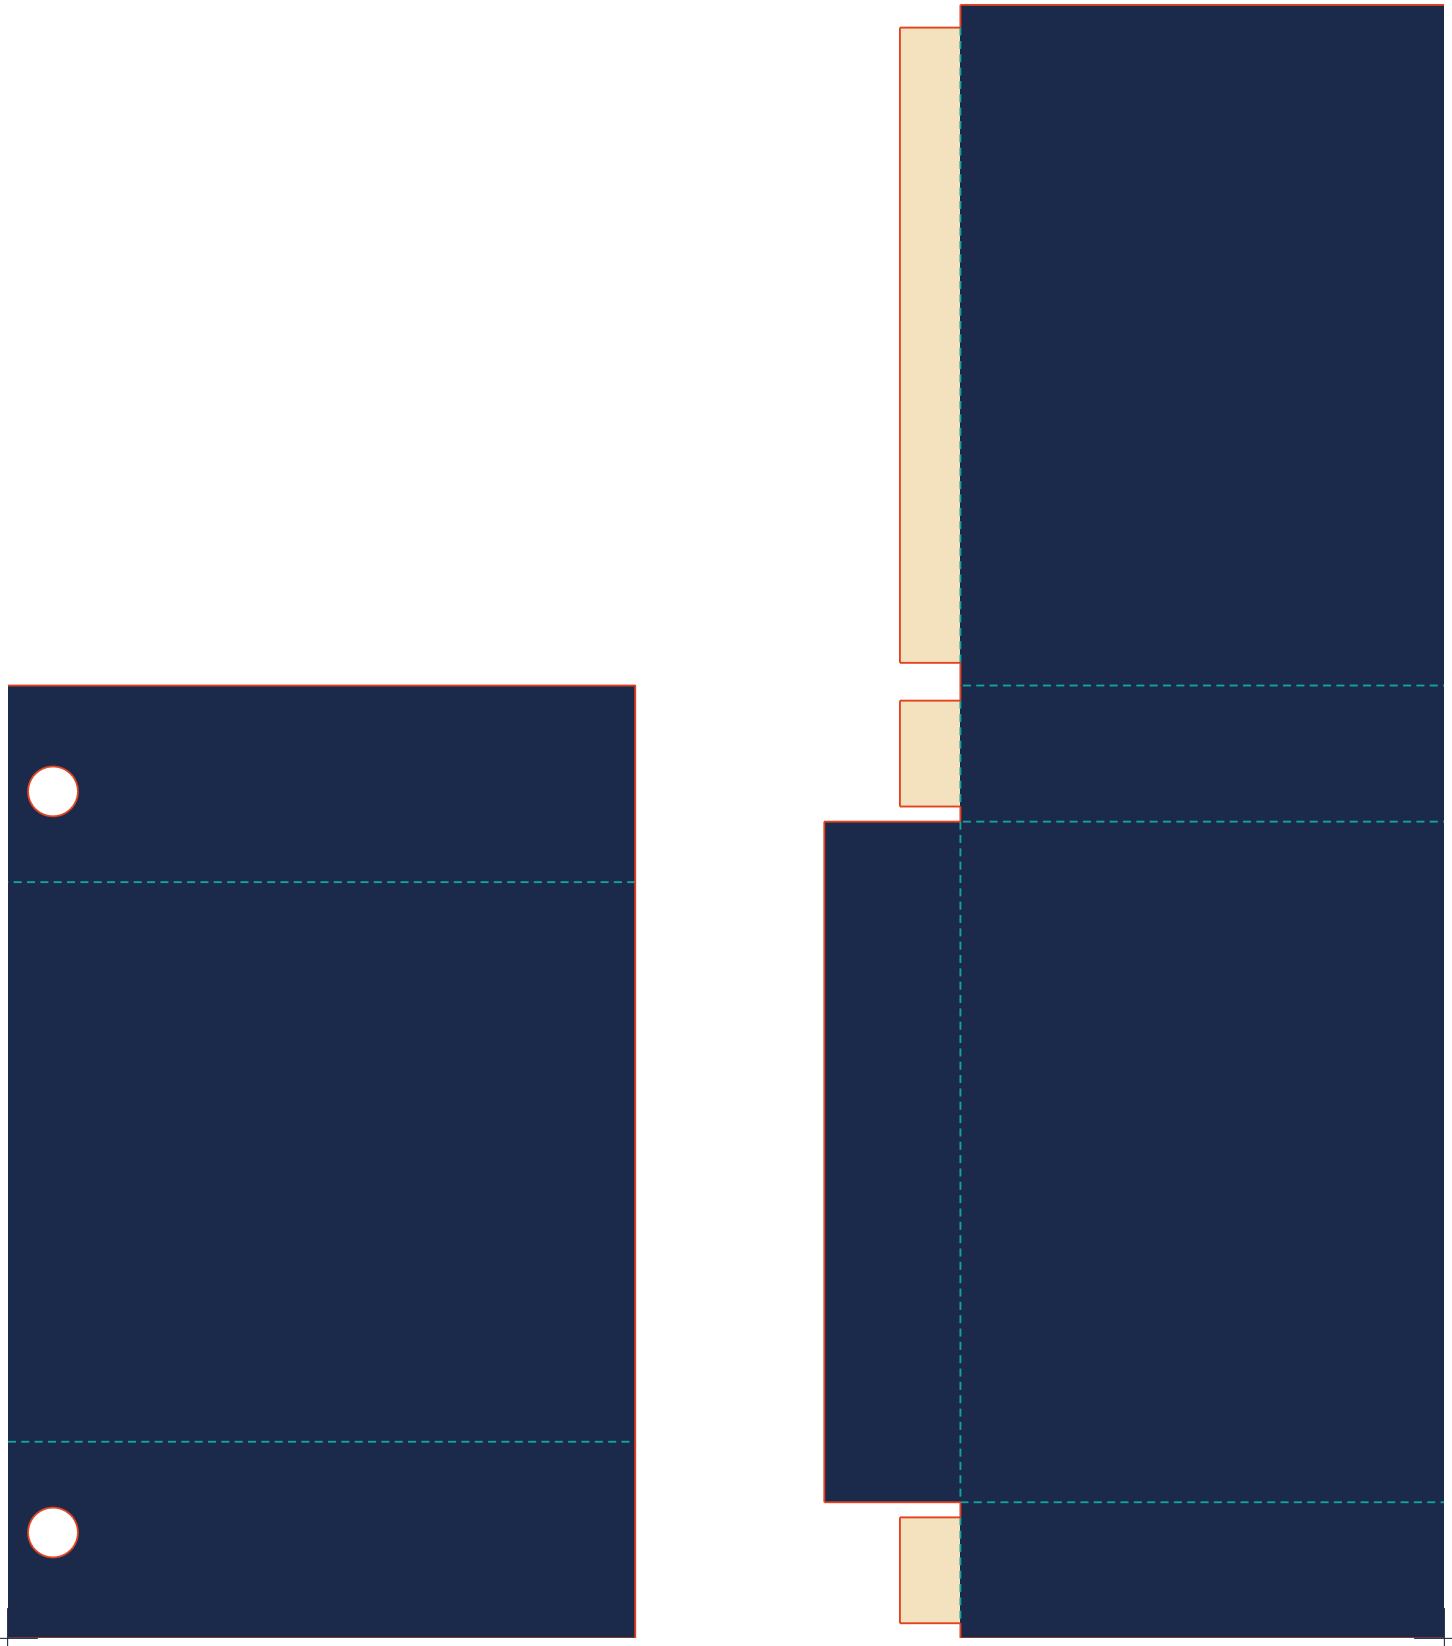

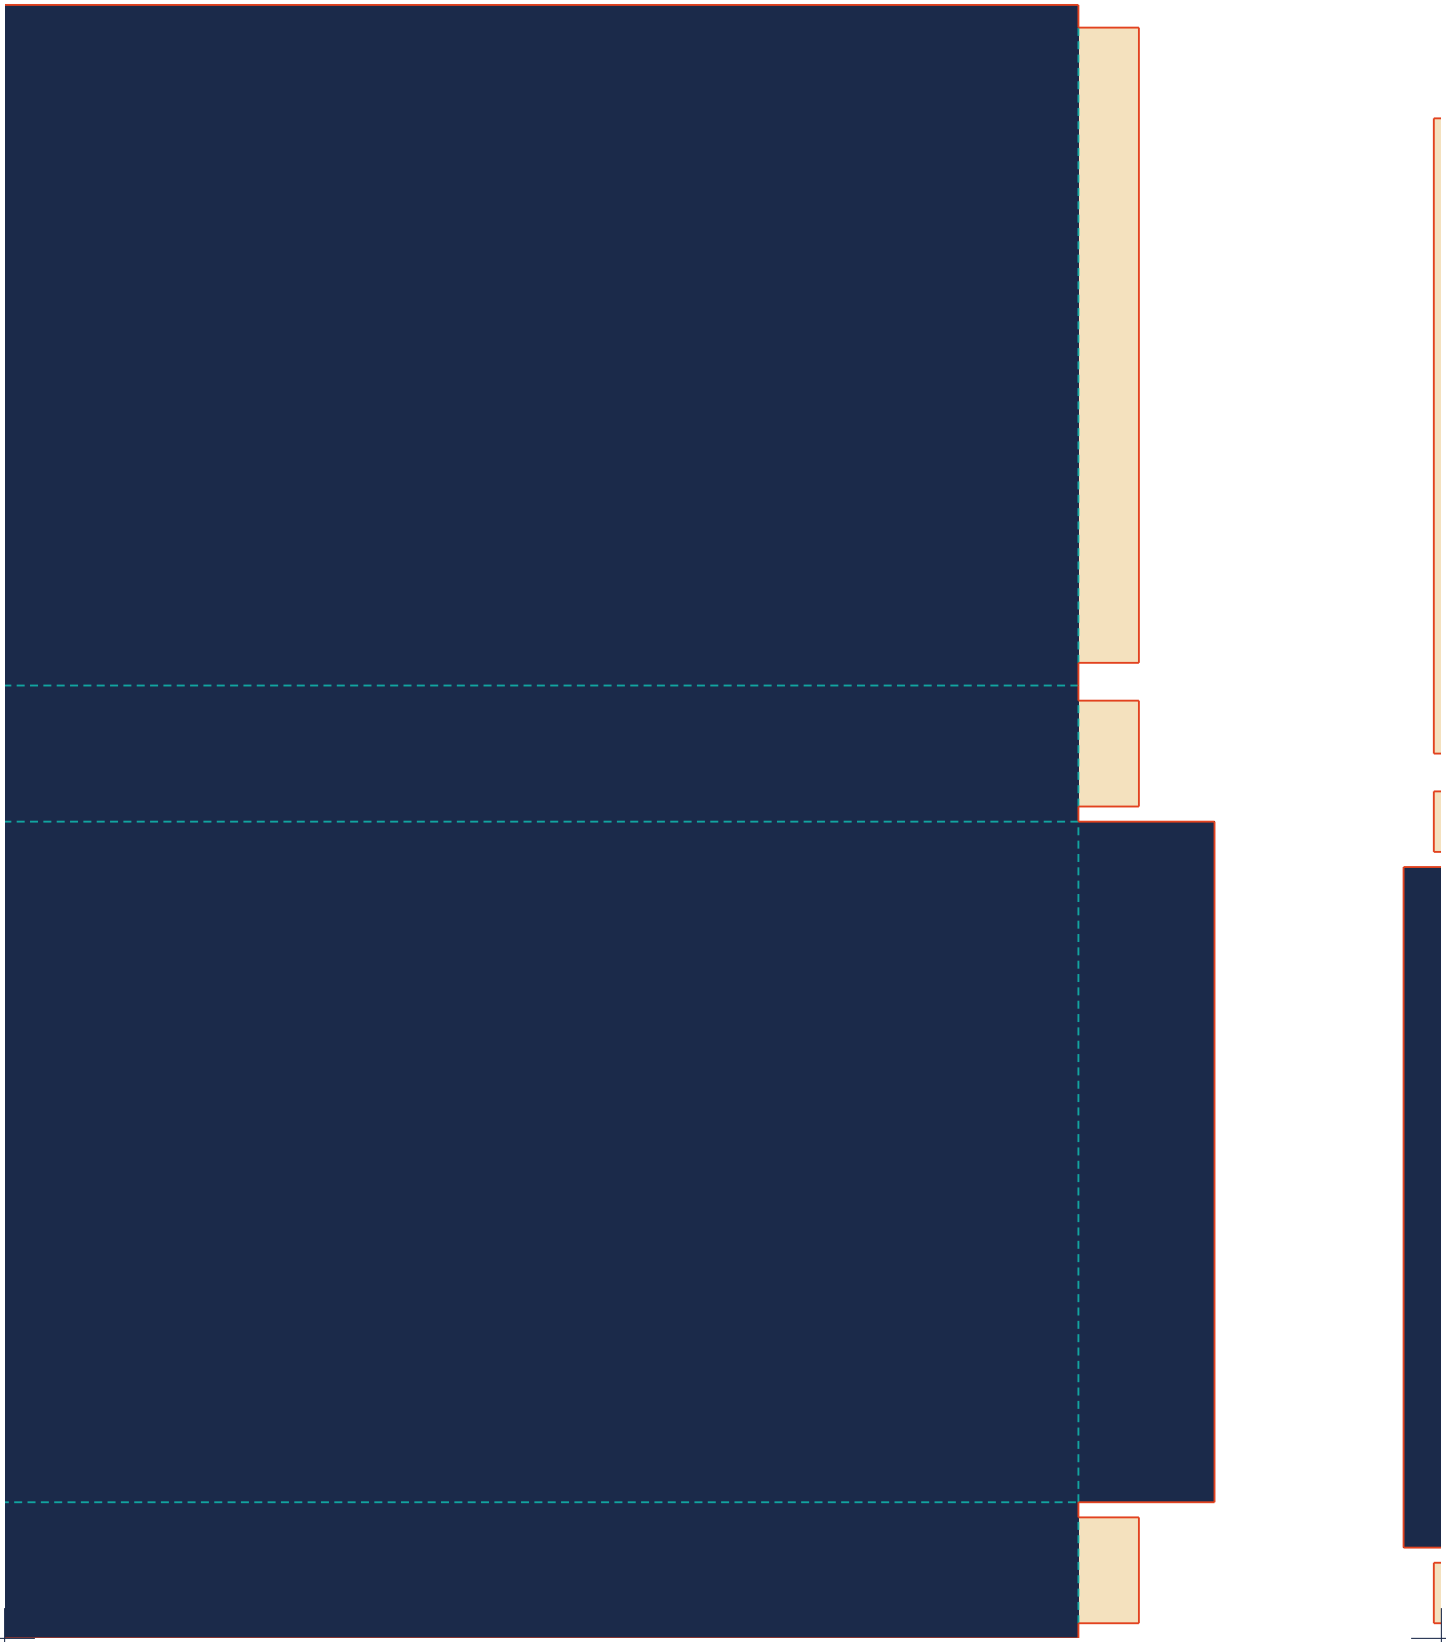

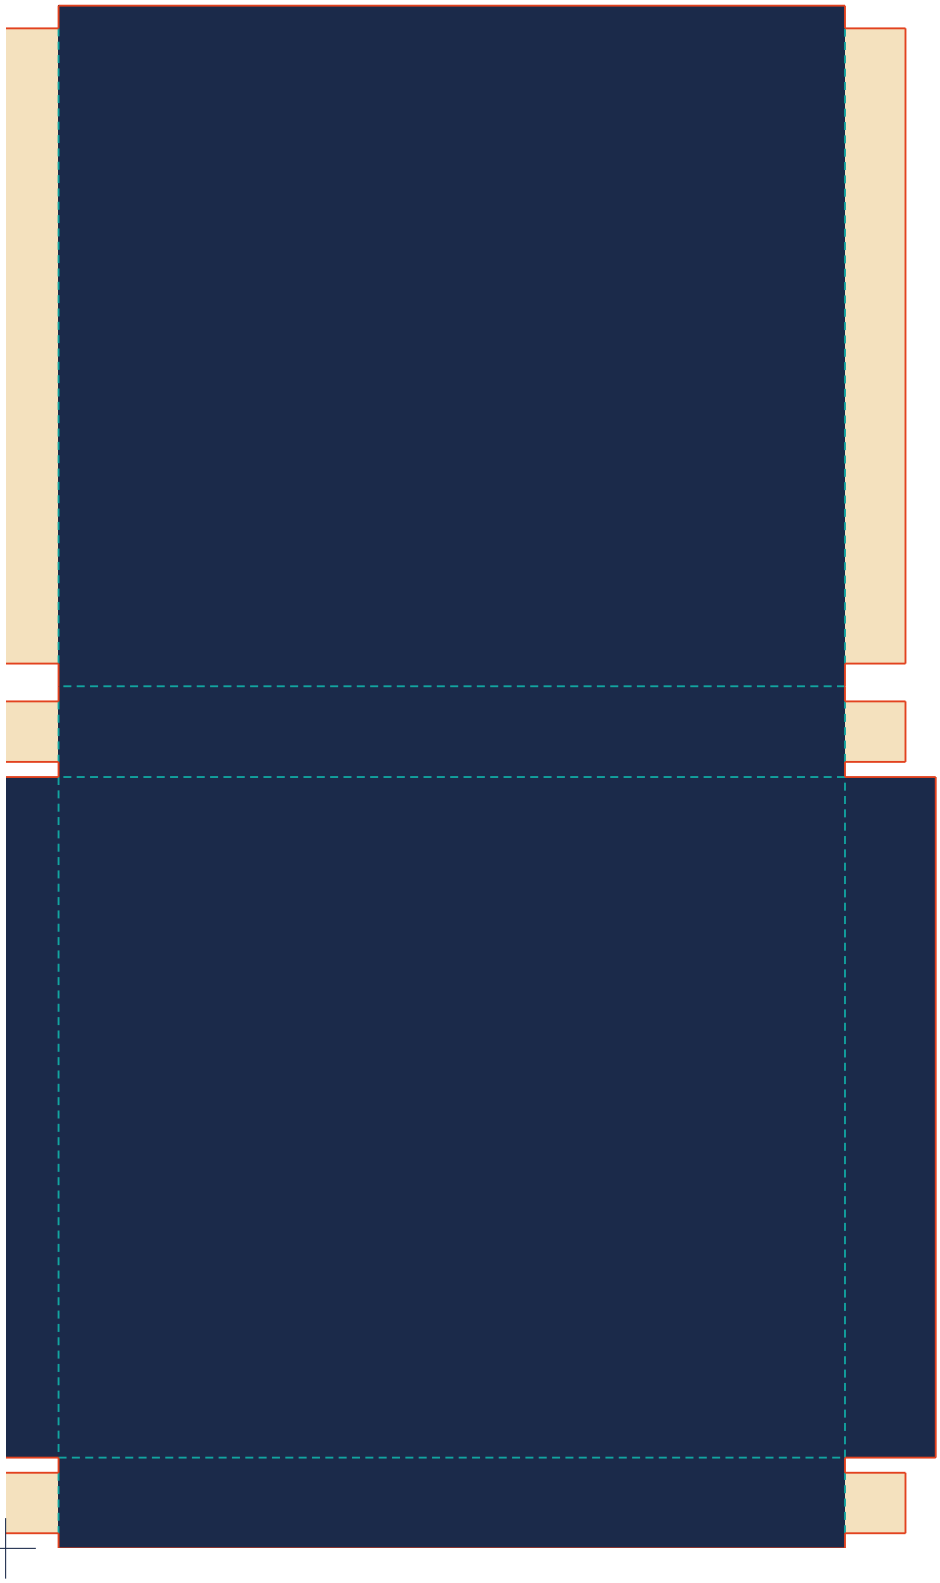

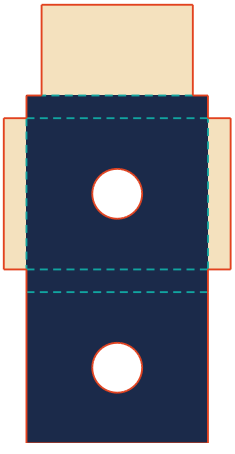



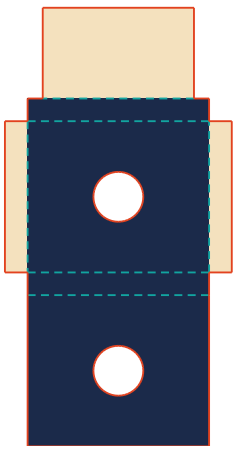

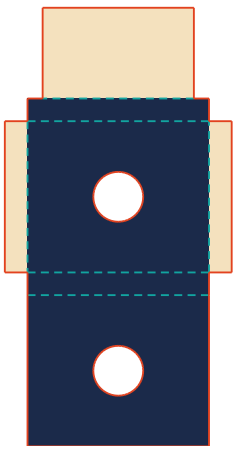

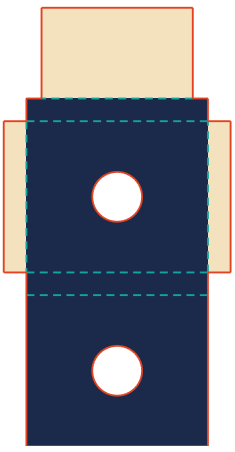

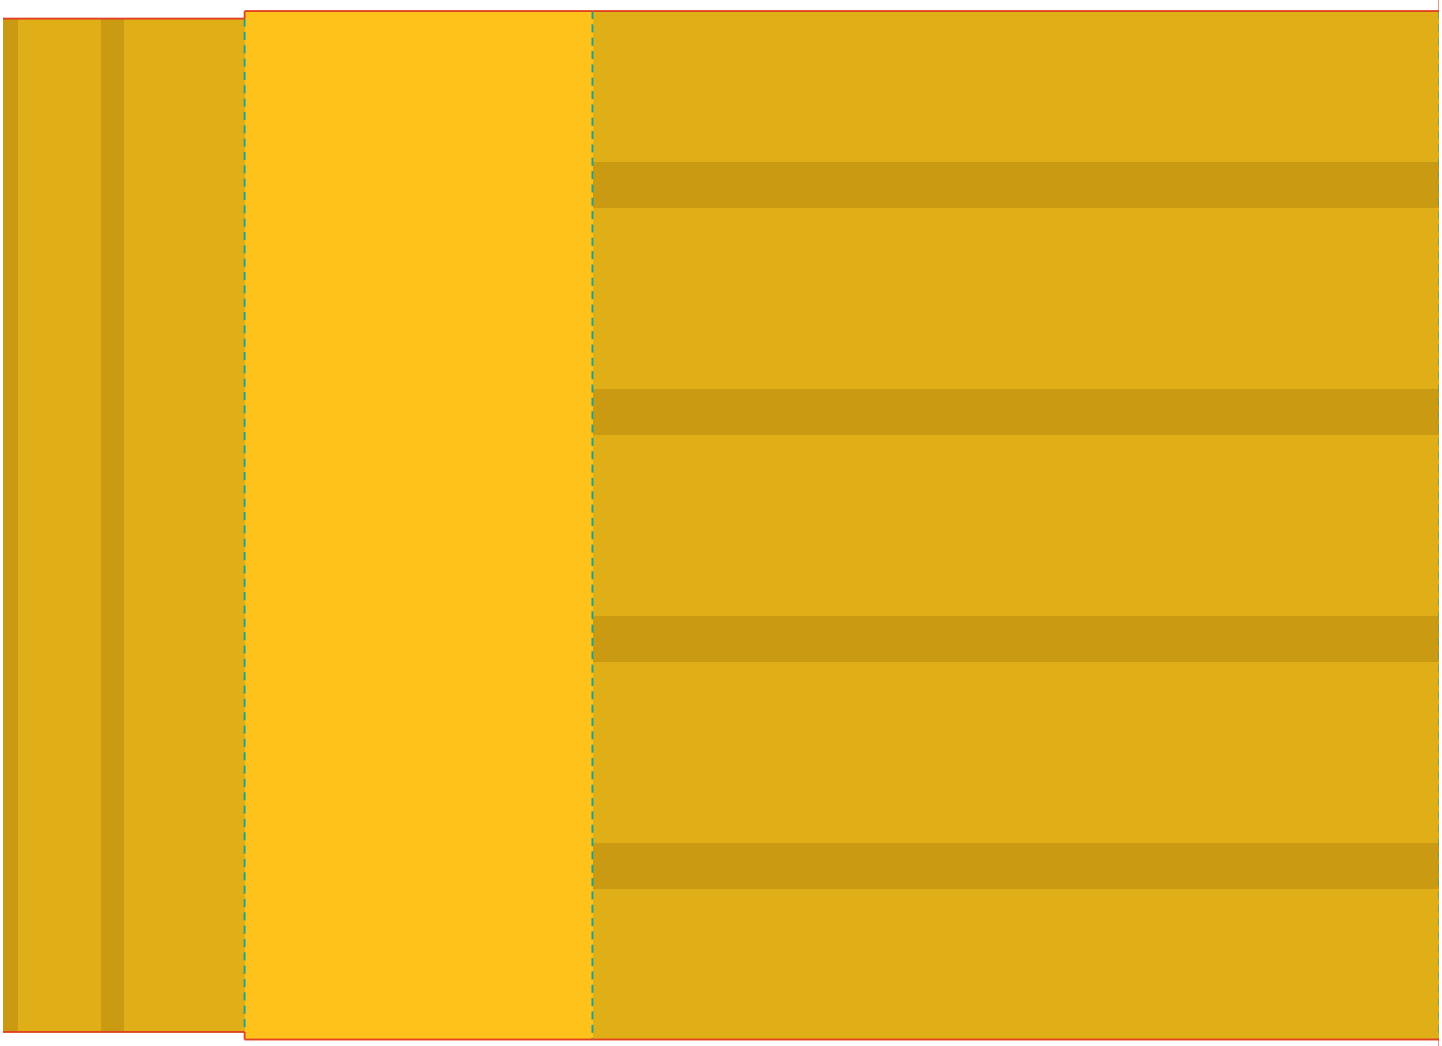

10 m³

10 m³

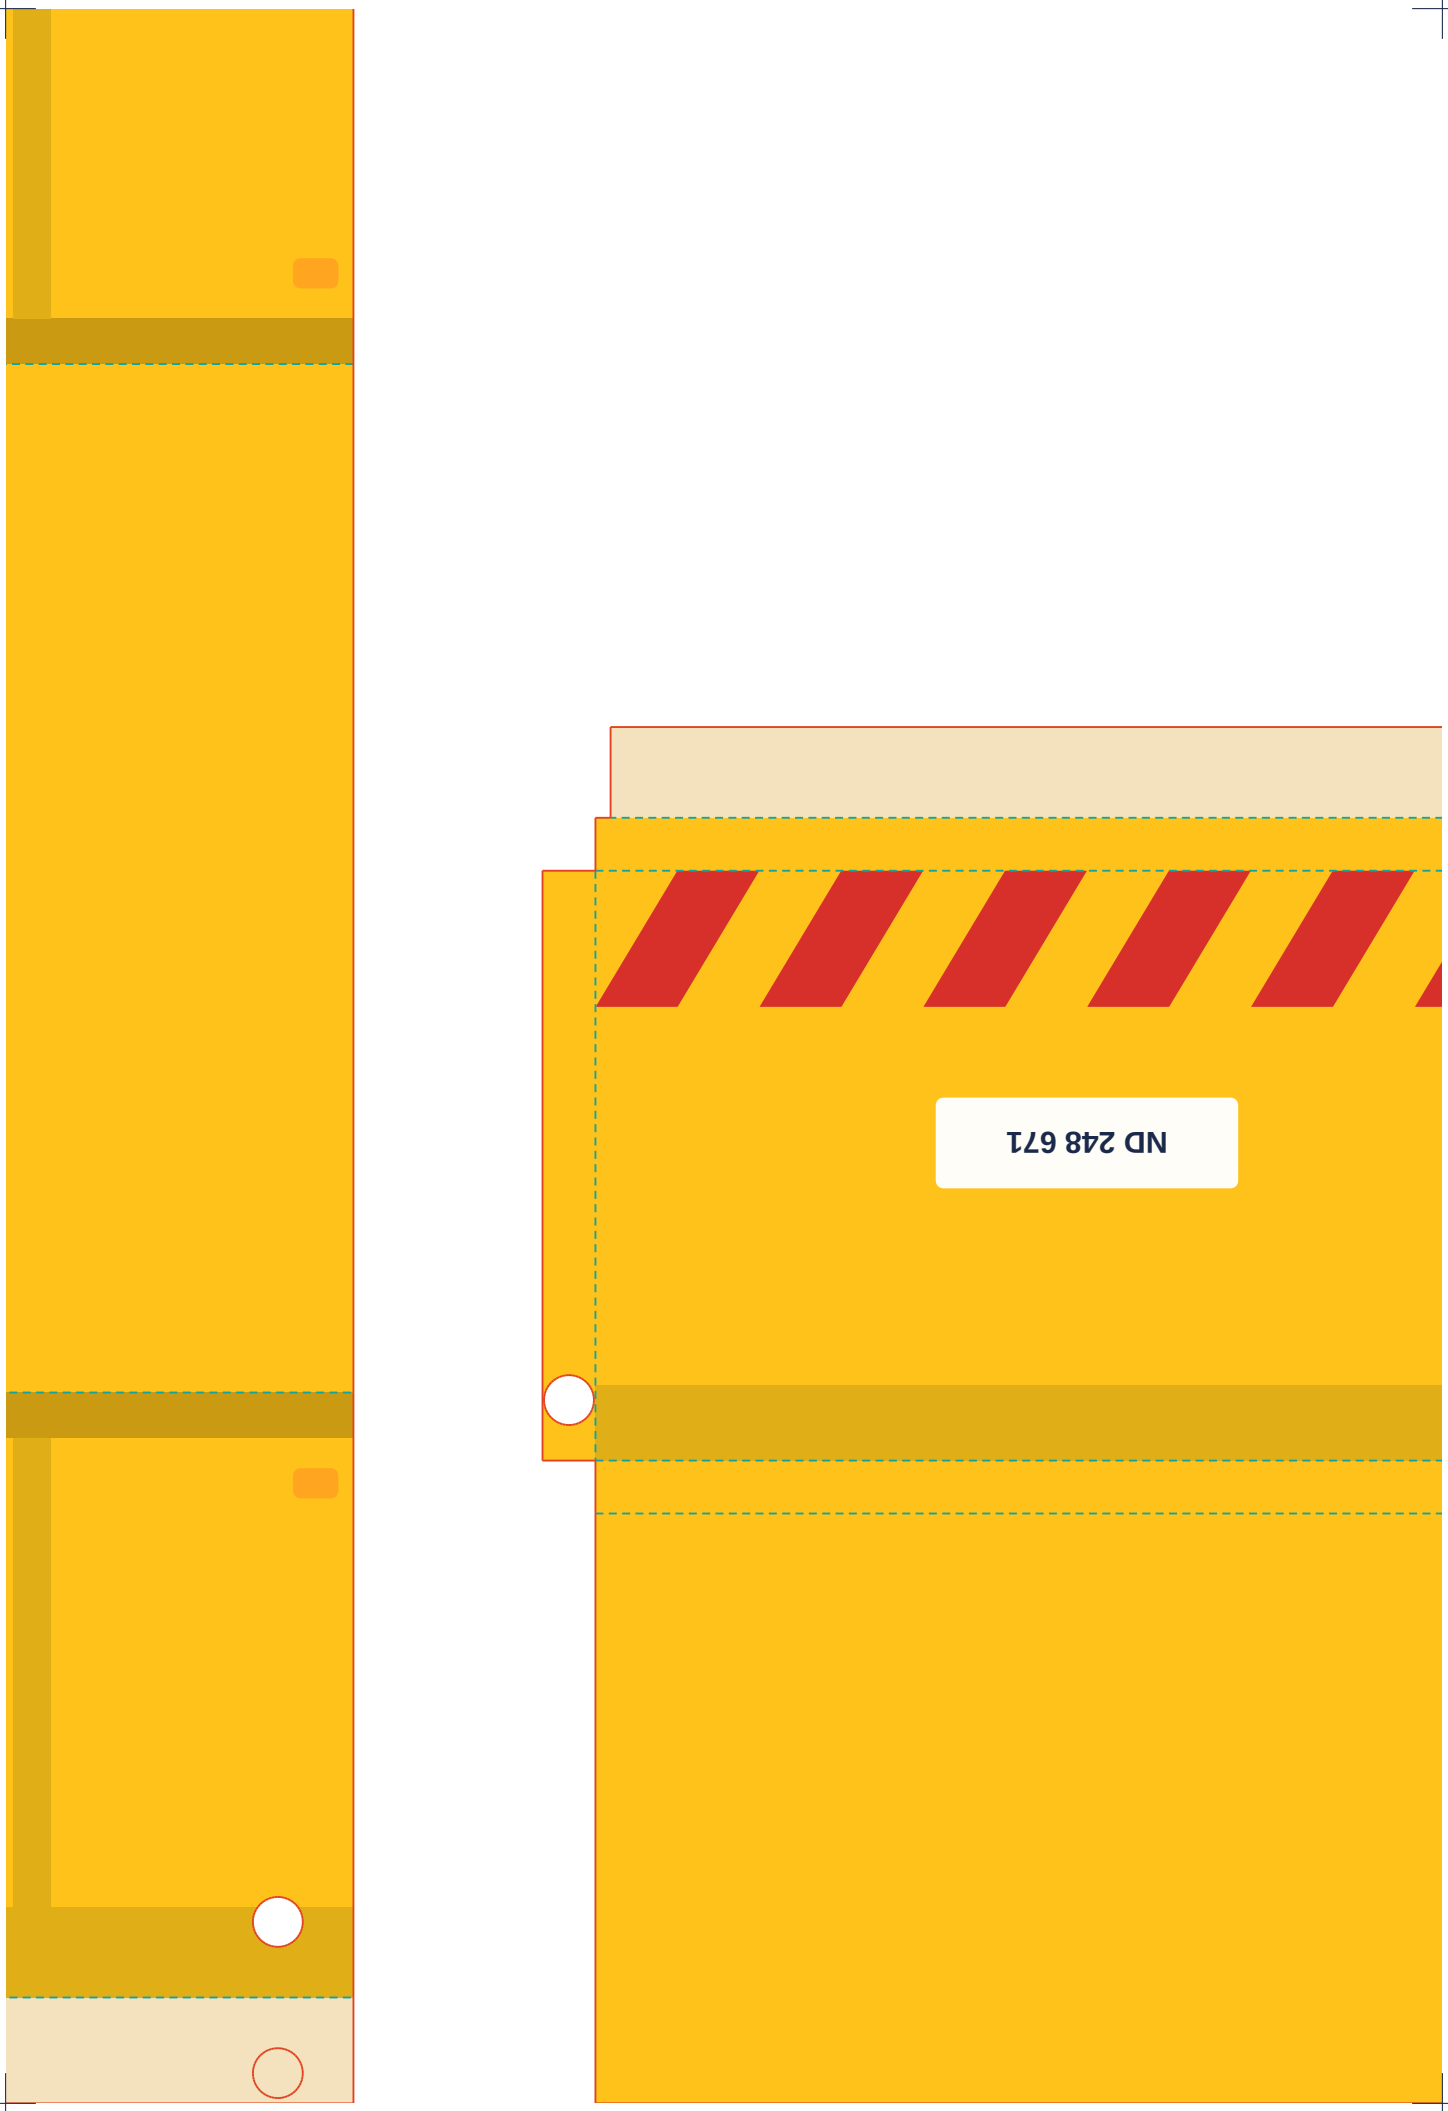
ND 248 671

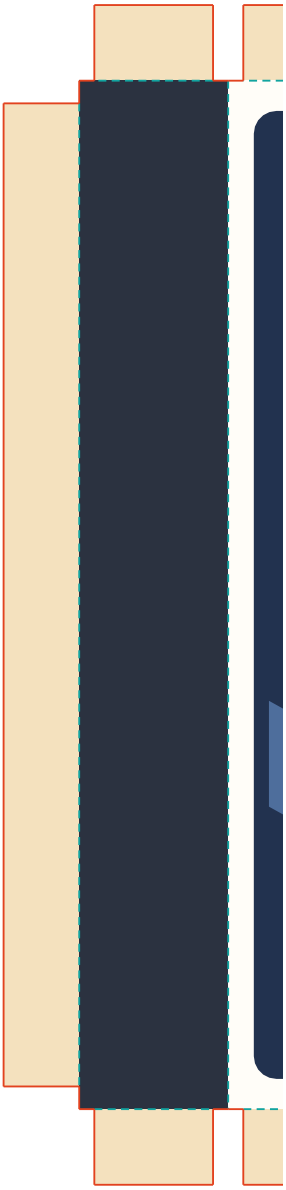

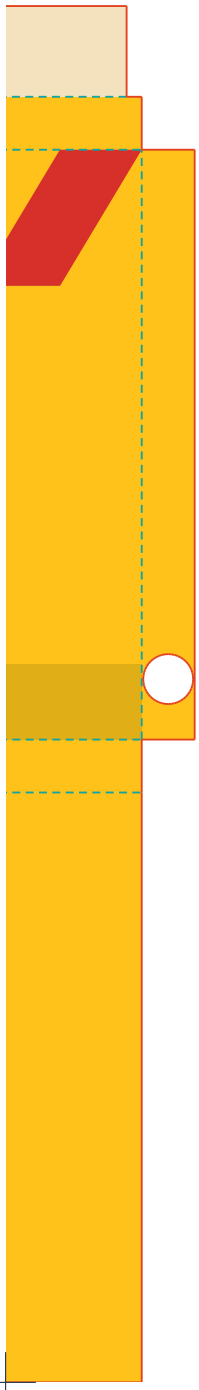

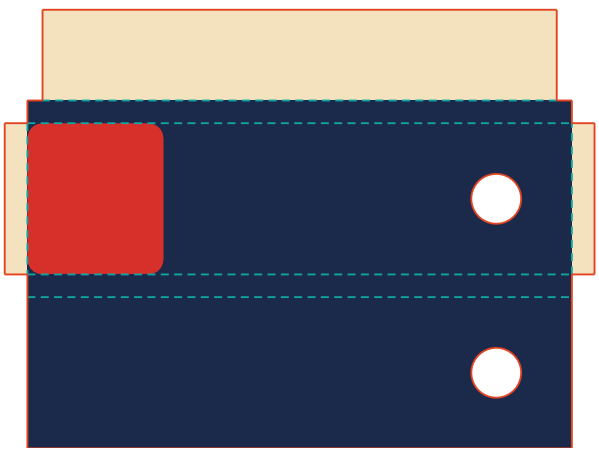

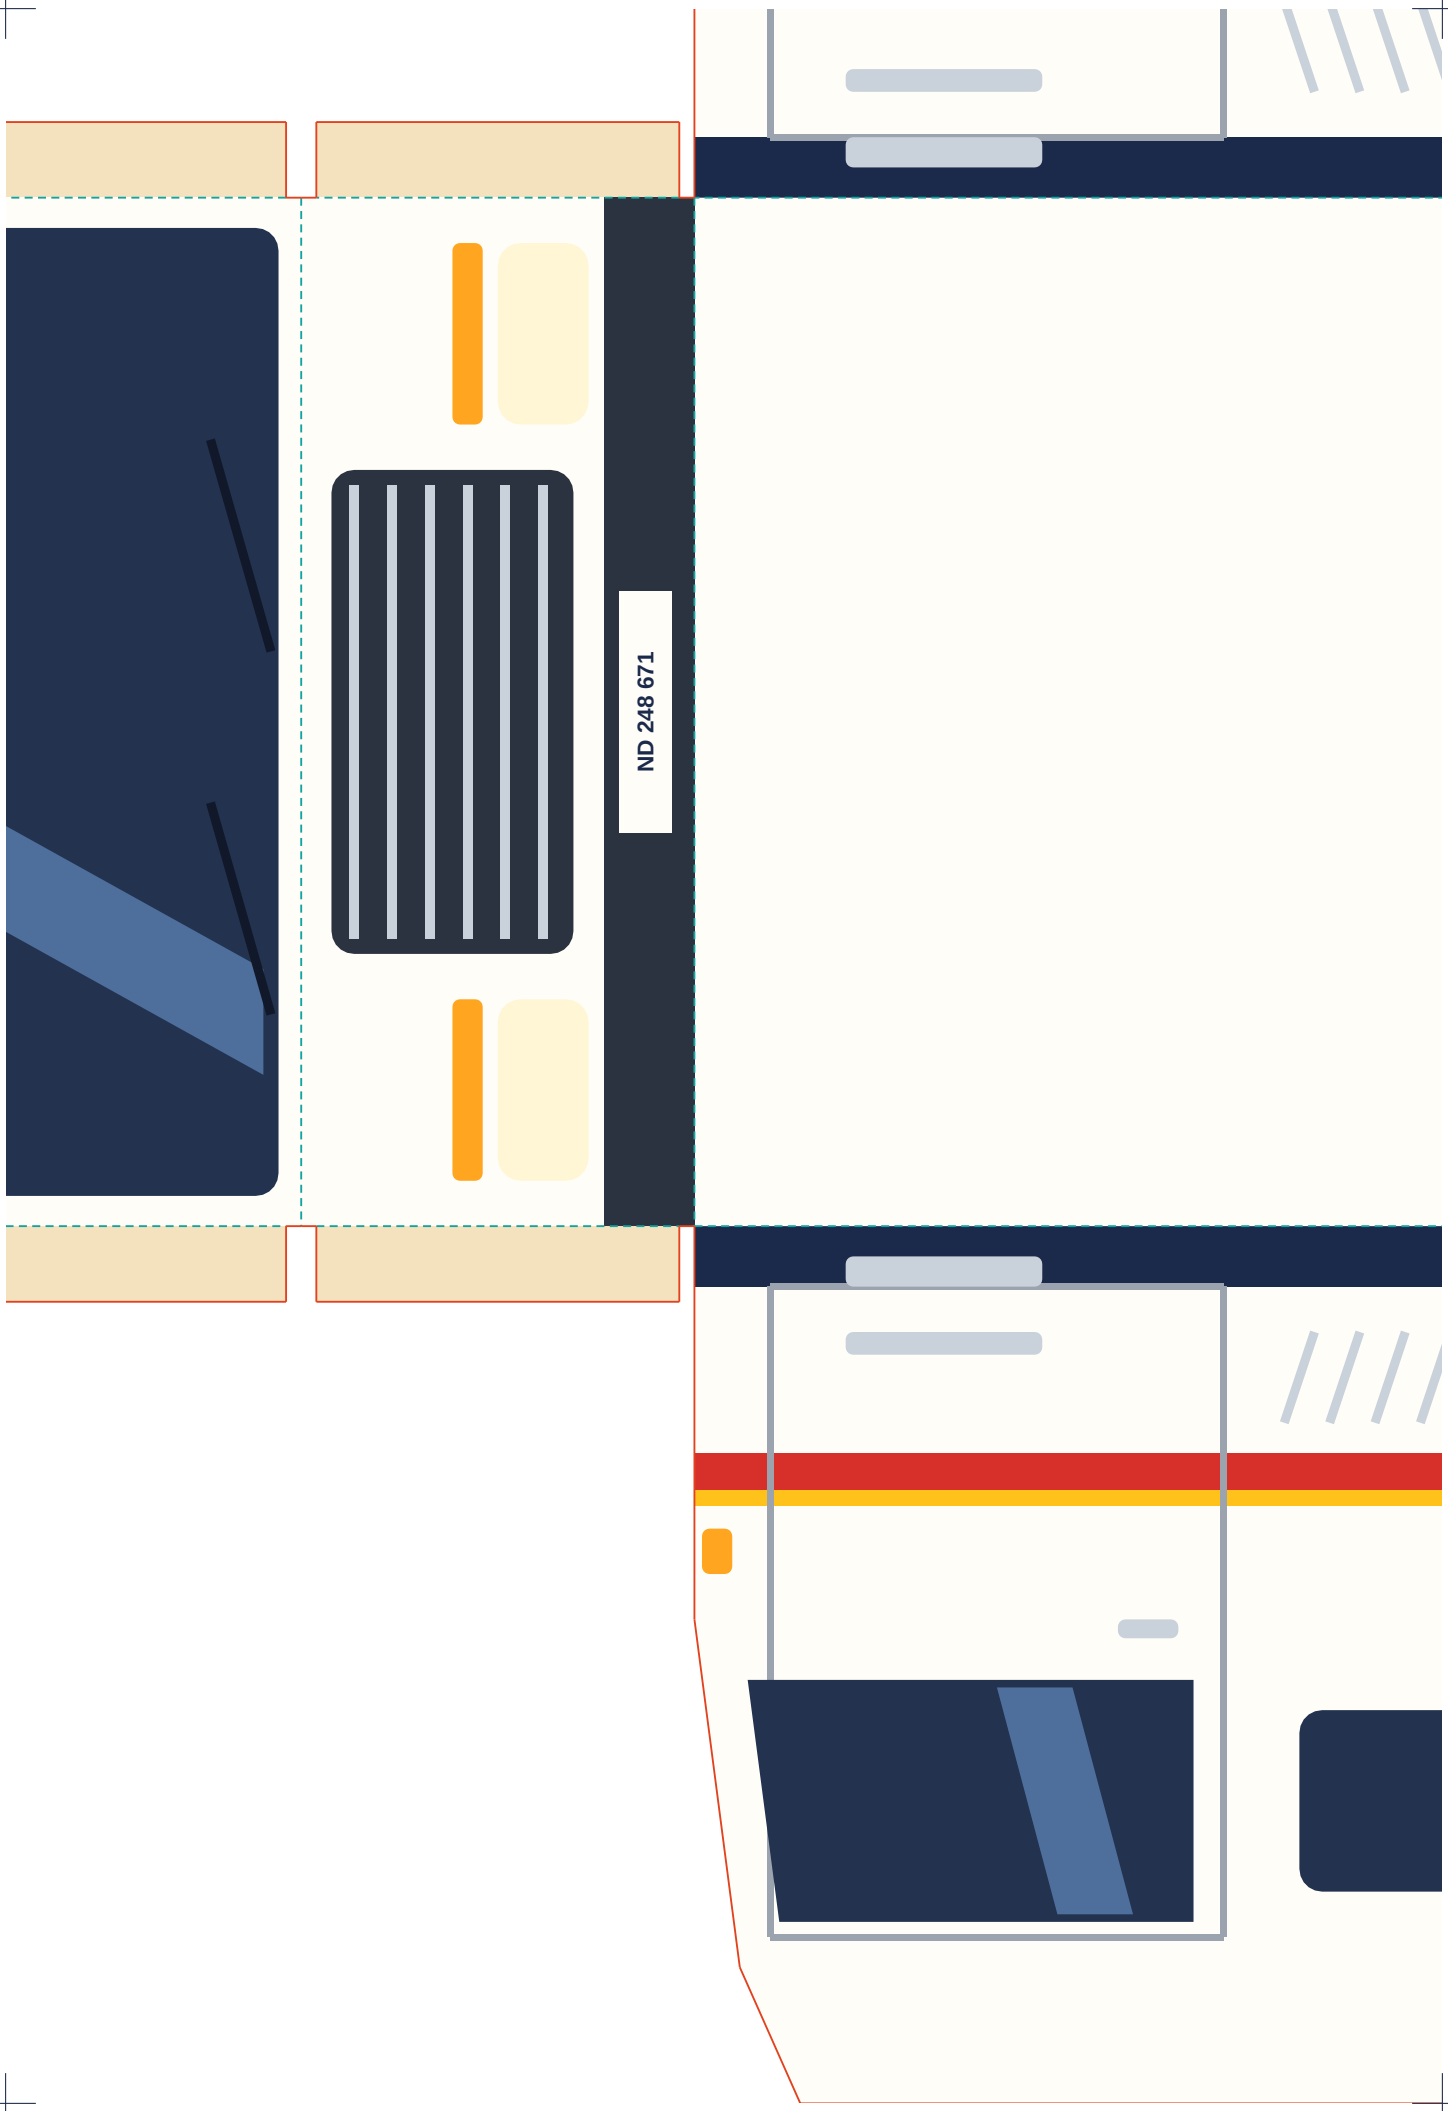
ND 248 671

